

Disconnecting Ford Sending Unit Fuel Line Couplings 2011 --



Method for Disconnecting Ford Sending Unit Fuel Line Couplings: The couplings on the sending unit are of the quick connect type shown in left photo above. To disconnect, a) Slide the tab that has teeth on its edge outwards as shown in the center photo. b) Next, press the rounded button, as shown in the right photo, and pull the coupling apart.