

TITAN pt. no.: 02 0000 0205

Important: Please read these instructions carefully and completely before starting the installation.

TITAN Fuel Tanks™

INSTALLATION INSTRUCTIONS



Extended Capacity Replacement Tank for FORD, Super Duty Diesel Pickup Trucks

7020217 For **2017+** FORD truck models F250 & F350: Crew Cab, Short Bed (6 1/2 ft.)

No drilling or cutting is required for this installation.

Required Tools:

- 1 ea. Ratcheting socket driver
- 2 ea. 10 mm, 13 mm sockets
- 1 ea. 12 inch long socket driver extension
- 2 ea. 8 mm, 15 mm end wrenches
- 1 ea. Small flat blade screw driver
- 1 ea. Large flat blade screwdriver
- 1 ea. T-27 Torx bit
- 1 ea. Rubber Mallet
- 1 ea. Hook Pick

Recommended Optional Tools:

- 1 ea. Hydraulic transmission jack
- 1 ea. Impact wrench
- 1 ea. Vehicle Lift
- 1 ea. TITAN Fuel Caddy™ to transfer fuel.

Generation 6 & 7



Tank Body Identification:

Note: The tank body has the above identification on its bottom. Please check to be sure the tank is properly identified as the one to fit your vehicle.

7020217 PARTS LIST

2017+ Ford Crew Cab Short Bed Titan Fuel Tank - 7020217			
Item	Description	TITAN Part Number	Quantity
1	2017 Ford CCSB Tank Body	02 0000 0193	1
2	O-Ring	02 0000 0197	1
3	Rollover Valve	99 0186 0000	2
4	1/2 NPT X 3/4" Hose Barb Adapter	99 0000 0625	1
5	Water Separator Mount	02 0000 0195	1
6	1/4"-20 X 3/4" Hex Drive Flat Head Screw, 18-8 SS	02 0000 0198	4
7	Mid Strap	02 0142 0000	1
8	2017 CCSB Ford Front Support Coated	02 0000 0433	1
9	3/8"-16 Serrated Flange Locknut, Grd 5, Zinc-plated steel	02 0000 0200	4
10	3/8" Oversized Flat Washer, 1.5" OD, Zinc-plated Steel	02 0000 0588	4
11	3/8-16 x 3" bolts, grade 8	02 0000 0432	2
12	3/8"-16 Flange Cap Screw, 1" Length, Grade 8, Black Phosphate Finish	99 0000 0450	2

IMPORTANT NOTICE: Before installation, be sure to thoroughly inspect inside of the tank for ANY foreign debris!

NOTE: Take a moment and write the new TITAN™ Tank serial number in the back of this instruction booklet now. The serial number is found on the bottom of tank.

NOTE: The original equipment tank's rear strap will be reused on the new TITAN Tank.

I. Remove Original Equipment Tank

Step	Description
1	Using best, safe practices, place the vehicle on a hoist that leaves the entire underside of the frame unobstructed.
2	Drain all the fuel from the original equipment (OEM) tank using a TITAN Fuel Caddy™, or a pump, or siphon.
3	Support the OEM tank.
4	Using a hook pick, loosen and remove the rubber seal that fits around the fuel fill spout and DEF fill tube (See Fig. 1).

Step	Description
5	Remove the bolts fastening the fuel fill spout (See Fig. 2).
6	Pull the fill spout assembly back toward the vehicle's frame and turn it so you have access to the hose clamps (See Fig. 3).
7	Disconnect the fill hose and vent line from the vehicle's fill spout.
8	There is a water separator attached to the front of the tank. It will have to be disconnected from fuel and electrical: First, disconnect the electrical connection on the bottom of the separator (See Fig. 4) by depressing the clip on the plug and remove.
9	Next, disconnect the fuel line at the top of the separator (See Fig. 5) by squeezing the two legs of the tab together and then pushing the entire tab towards the rear of the vehicle. Note: This coupling operates differently from all others involved in the install.
10	Disconnect the fuel line coupler located on the frame in front of the water separator (See Fig. 6). See also Fig. 7, "Method for Disconnecting Fuel Line Couplings".
11	Loosen and remove OEM tank straps by undoing the bolts on straps at inboard and outboard of the tank and lower tank a few inches. Hold the factory "J-nuts" with an end wrench to prevent them from breaking. Retain the rear strap as it will be reused with the new TITAN tank.
12	Disconnect fuel gauge electrical connection from sending unit on top of the tank.
13	Remove the OEM tank from the vehicle.



(Fig. 1) Loosen and remove rubber seal.



(Fig. 2) Remove the bolts holding the fill spout.



(Fig. 3) Move fill spout assembly toward vehicle frame to gain access to the hose clamps.




(Fig. 4) Disconnect electrical connection on the bottom of the water separator.



(Fig. 5) Fuel line connector at top of the separator.



(Fig. 6) Fuel line coupler located on the frame in front of the water separator.

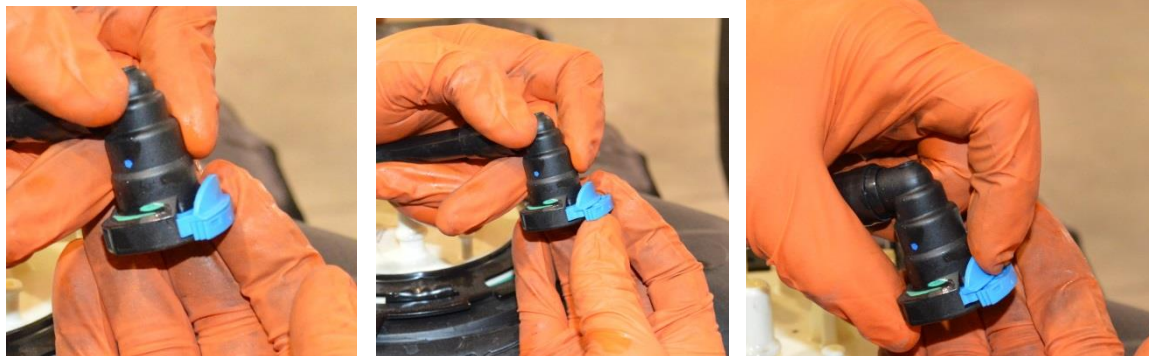


(Fig. 7): **Method for Disconnecting Fuel Line Couplings:** The majority of the couplings involved in this installation are of the quick connect type shown in left photo above. To disconnect, a) Slide the tab that has teeth on its edge outwards as shown in the center photo. b) Next, press the rounded button, as shown in the right photo, and pull the coupling apart. The coupling shown in Fig. 5 functions differently, see Step no. 9 for it.

II. Prepare Vehicle and Replacement Tank

Step	Description
14	Remove the guard located on the top of the OEM hold-down ring.
15	Disconnect all of the fuel lines from the sending unit.
16	On the front of the OEM fuel tank, use a T-27 Torx bit and driver to loosen and remove the screw, located on the bottom of the water separator, which holds it to the mounting bracket. With the screw removed, using a rubber mallet, carefully tap the water separator up and out of its mounting bracket on the tank (See Fig. 8). <u>Be very careful not to strike any of the fittings</u> on the bottom of the water separator.
17	Loosen the OEM hold-down ring on the sending unit by turning it counter-clockwise (See Fig. 9). Remove the sending unit from the OEM tank.
18	The new TITAN tank comes with an O-ring to seal for the sending unit. Make sure the new O-ring gasket is placed into the gland (groove) at the sending unit opening.
19	Place the sending unit into the TITAN tank (See Fig.10). Be sure to turn the sending unit so that the tab lines up with the "tab location" marks on the tank (See Fig. 11).
20	Place the hold down ring from the OEM tank onto the sending unit and tighten it clockwise as far as it will go (See Fig 12). Be sure the studs that hold the OEM guard are lined up in the same position as they were on the OEM tank.

Note: IF your Titan Tank came with a back flow valve, install as shown below.

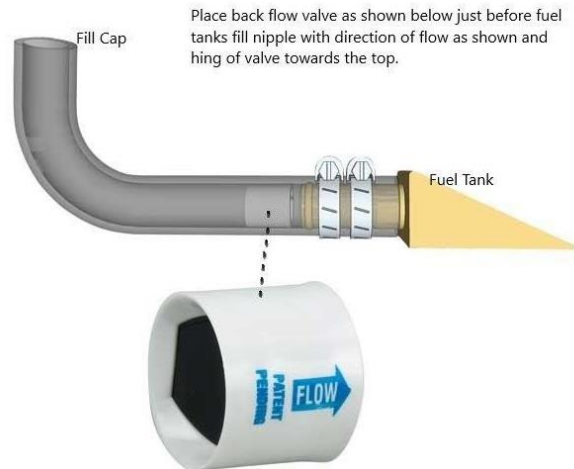

- 21 Move the fill hose and vent hose from the OEM tank to the new tank, install and tighten securely.
- 22 Install the water separator on the TITAN tank by sliding it into the mounting bracket and tightening down the hold-down screw on the bottom.
- 23 Install the fuel lines on the sending unit and water separator as they were on the OEM tank. Install the guard on the top of the hold-down ring being careful not to over-tighten the studs. The tank should appear as in Fig. 13.
- 24 The Front Support Assembly is included as a kit with the tank. Assemble and install it on the vehicle's cross member as shown in Fig.14 leaving the bottom bracket off for now. Be sure all of the nuts holding the support to the vehicle's cross member are tightened to 15 lb.-ft. of torque.



(Fig 8) Using a rubber mallet, carefully tap the water separator up and out of its mounting bracket on the OEM tank.



(Fig. 9) Loosen hold-down ring by turning it counter-clockwise as shown.



(Fig. 10) Place sending unit into the TITAN tank.




(Fig. 11) Line the tab on the sending unit up with the "tab location" mark on the TITAN tank.



(Fig. 12) Reuse the OEM hold-down ring to mount the sending unit in the TITAN tank. Tighten by turning it clockwise as far as it will go.



(Fig. 13) TITAN 7020217 tank shown with sending unit, water separator, fuel lines, sending unit guard, and fill and vent hoses installed; ready for installation into the vehicle.

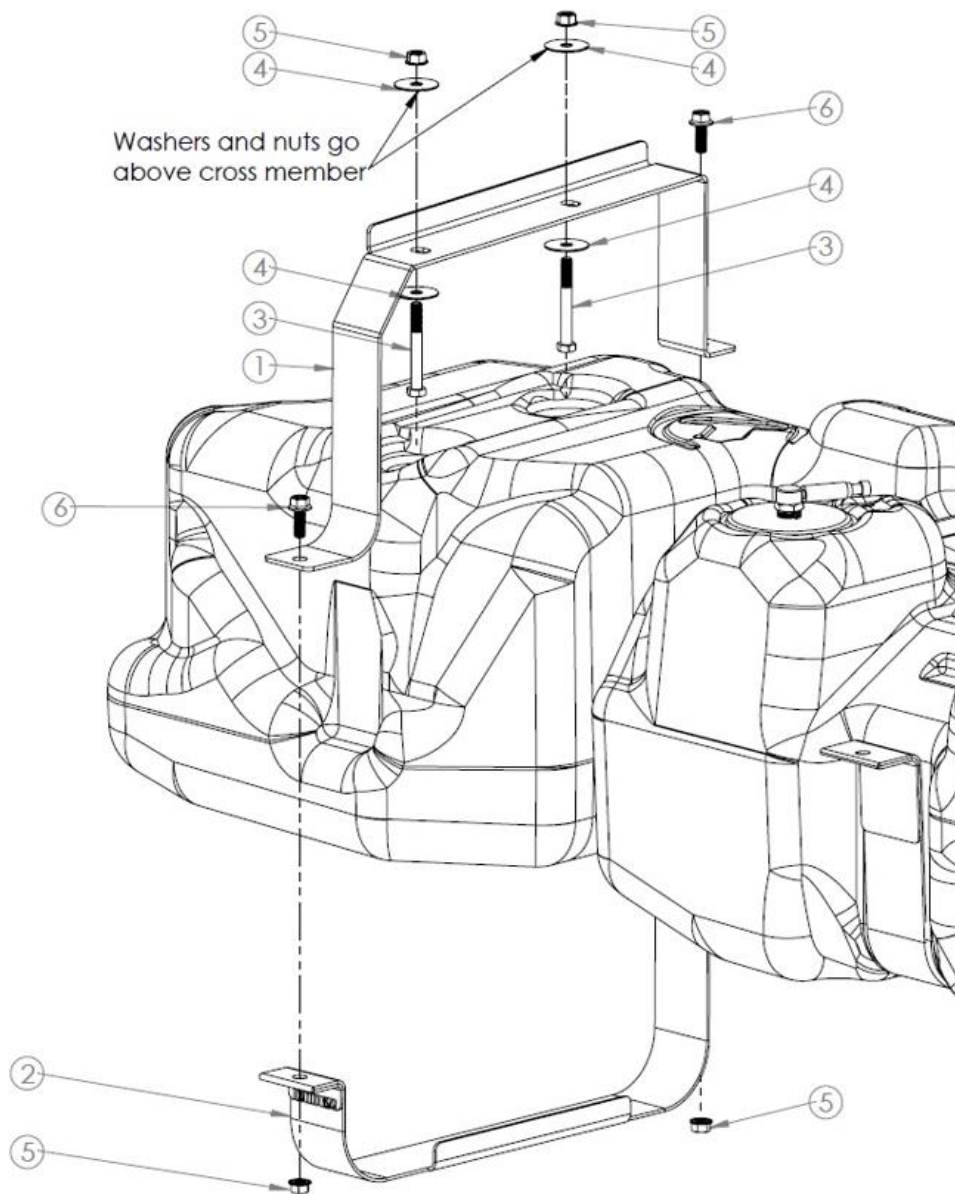

ID	Description	Part Number	Qty.
1,2	Front Support	02 0000 0433	1
3	3/8"-16 x 3" Hex Head HSS Screw, Grade 8	02 0000 0432	2
4	3/8" Oversized Flat Washer, 1.5" OD, Zinc Plated	99 0000 0588	4
5	3/8-16 Serrated Flange Locknut, Grade 5 Zinc Plated	02 0000 0200	4
6	3/8"-16 x 1" Flanged Cap Screw, Grade 8, Black Phosphorus Coating	99 0000 0450	2

(Fig. 14) Exploded view of the Front Support Assembly. Tighten all nuts to 15 lb.-ft.

III. Install Replacement Tank in Vehicle

Step	Description
25	Support the TITAN tank and lift it nearly into place leaving enough space to be able to reach up and plug the fuel gauge electrical connection onto the sending unit.
26	After plugging in the electrical connection on the sending unit, lift the tank all the way into place. Reuse the rear strap from the OEM tank as the rear strap on the TITAN tank. A new strap is included with the TITAN tank for the other strap position. Install both straps finger tight.
27	Install the bottom front support bracket with provided bolts and locknuts as seen in Fig.14 diagram.
28	Now tighten the two straps to the vehicle manufacturer's specifications.
29	Reconnect the electrical connection on the bottom of the water separator.
30	Reconnect the fuel line connections on top of the water separator and on the frame.
31	Reconnect the fill hose and vent line to the vehicle's fill spout.
32	Move the fuel fill spout back into place and replace and tighten the bolts holding it.
33	Replace the rubber seal that fits around the fuel fill spout and DEF fill tube.
34	Make sure ALL mounting hardware, clamps, bolts, etc. are properly installed and TIGHT. Double check it.
35	IMPORTANT! Lower vehicle, <u>fill tank to the first nozzle "click-off" with diesel fuel and check for leaks.</u>

Gen 7 XXL Tank Drilling Instructions

Important: These instructions only apply if installing a Gen 7 accessory kit. Please read through all instructions fully before starting.

Step 1: Remove the Plug

- Begin by safely removing any existing plug or cap from the tank to allow access to the area you'll be drilling.

Step 2: Set Up a System to Catch Shavings

- To prevent debris from entering the tank and causing damage, set up a system to catch the plastic shavings. Options could include:
 - Placing a rag or cloth inside the tank to catch the shavings.
 - Using a vacuum with a hose directed at the drilling site to suck up the shavings as you work.

Step 3: Drill the Holes

- Start with a small pilot drill bit, and gradually increase the drill bit size to achieve the desired hole diameter. A small amount of grease on the drill bit can catch some of the plastic shavings from falling into the tank.
- Be careful to drill as large as possible without damaging the threads or surrounding plastic. Take your time, and avoid contacting the threads.
- Be careful to drill only the necessary holes for the intended kit.



Fast Fill Kit



Universal Pickup Tube and Return System

Step 4: Trim the Inside of the Holes

- After drilling, use a razor blade or utility knife to carefully trim the inside of the hole, ensuring it's flush with the threads. This step helps smooth out any rough edges and ensures a clean fit for the fittings.

Step 5: Clean the Tank

- Once you've finished drilling and trimming, carefully remove all plastic shavings from inside the tank. Use compressed air, a vacuum, or a damp cloth to ensure the tank is completely free of debris. This is crucial to avoid any plastic pieces entering the fuel system, as they could cause damage or clog components.

Gen 7 Fast Fill Vent Kit (9901770) Install

Step 1: Drill Out Holes

- Follow the drilling instructions above carefully.

Step 2: Apply Thread Seal Tape

- wrap the threads of the valve in thread seal tape (Teflon tape).

Step 3: thread valve into tank

- Carefully thread the roller valve into the tank, ensuring you do not cross-thread it.



Go to TITAN's website to view video Installation Instructions and tips.

* All capacities are approximate

Be sure to return the completed warranty registration for your new Titan fuel tank; or you can register on-line at www.titanfueltanks.com


You will find your tank's serial number located on the bottom of the tank.

Write your tank's Serial Number here: _____

A tank must be registered within sixty (60) days of receipt for the warranty to be valid.

Warranty is void if product is improperly installed.

For questions or customer service call **(800) 728-4982**

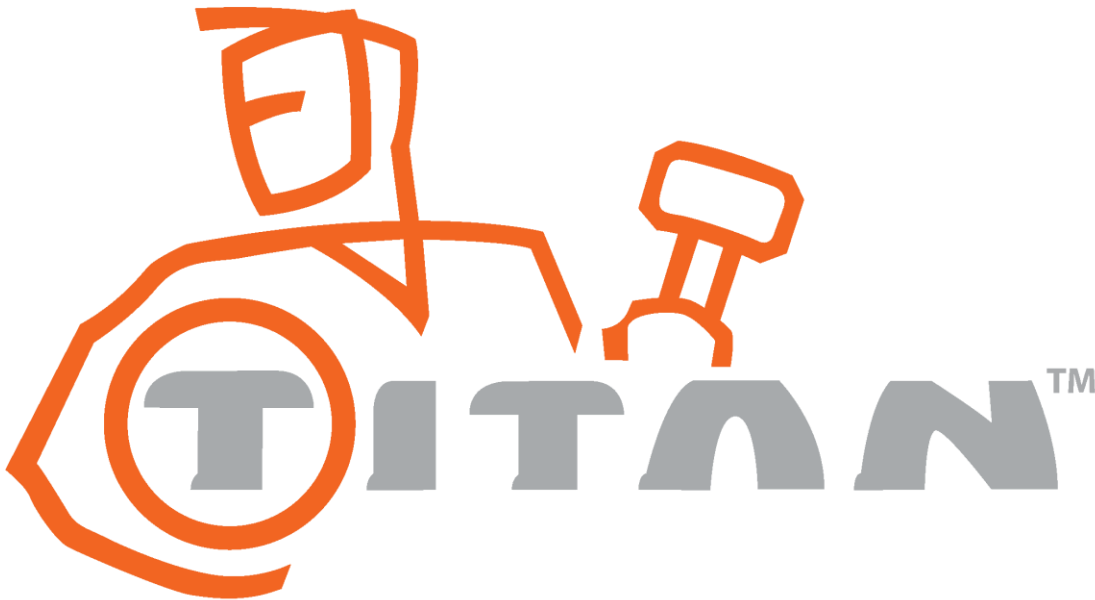

TITAN Fuel Tanks

P.O. Box 2225

Idaho Falls, ID 83403 USA

Telephone (208) 522-1325, FAX (208) 529-2162

www.titanfueltanks.com

TITAN Fuel Tanks are PROUDLY MADE IN THE USA

Revised 3.26.26 ©2022 Supertanks, LLC. All rights reserved.